




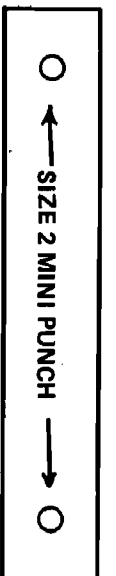

CONCHO STRIP PATTERN

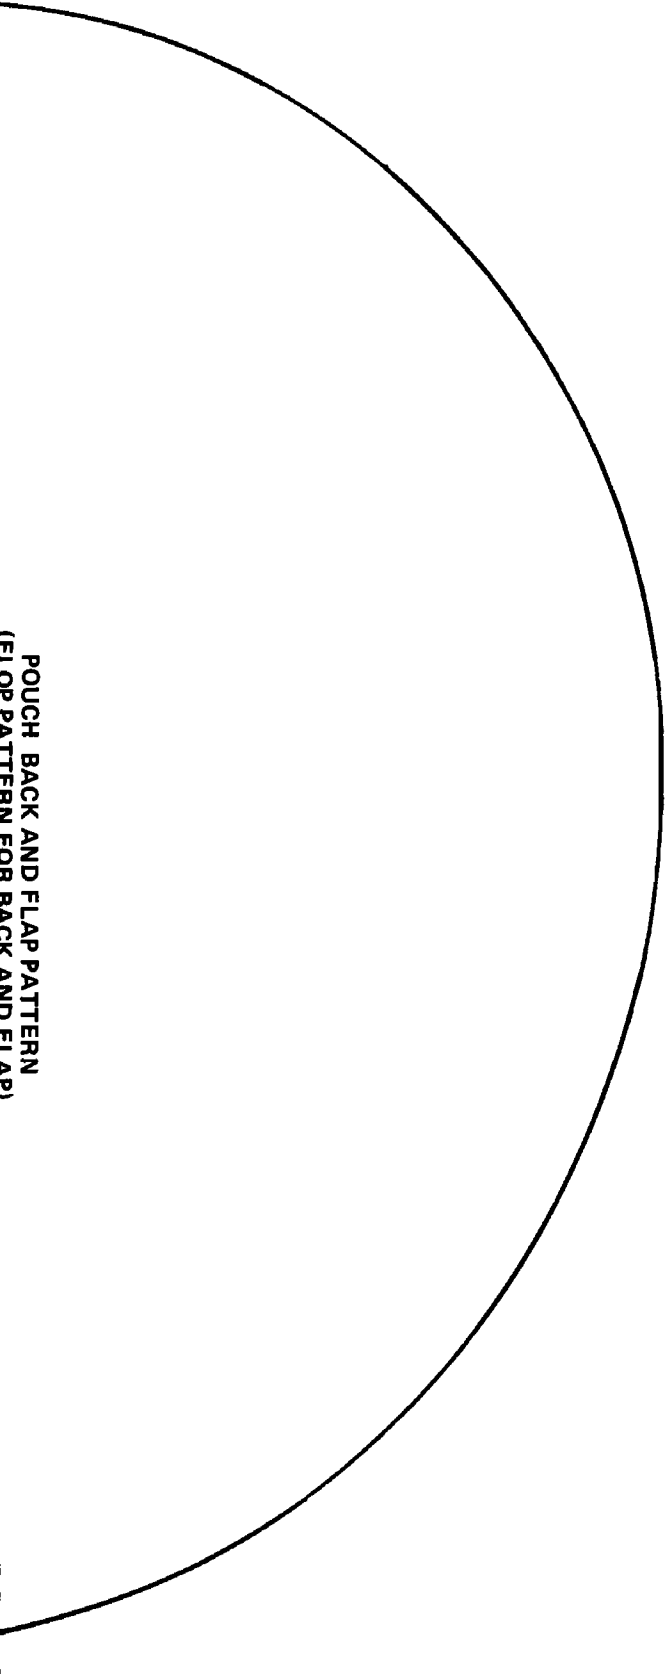

SWIVEL SNAP STRIP PATTERN

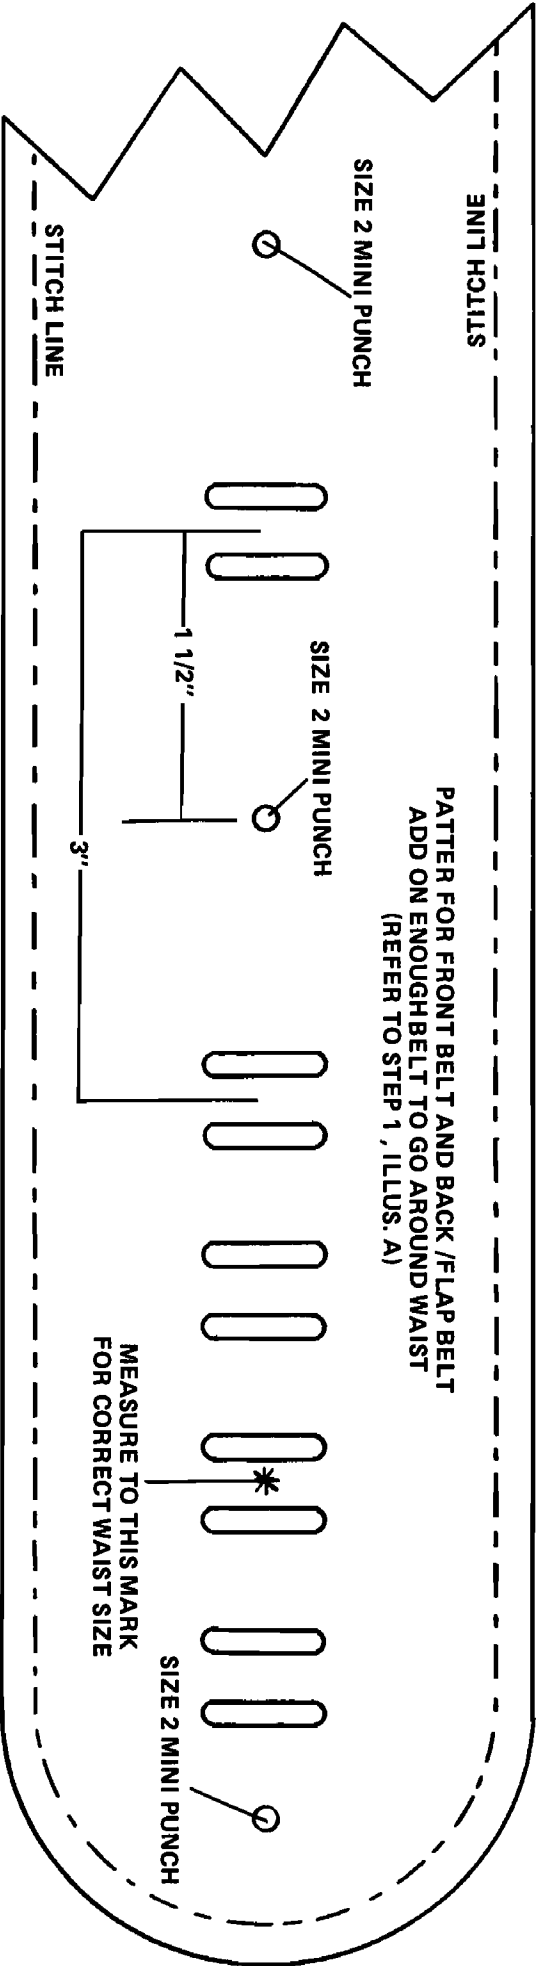

POUCH BACK AND FLAP PATTERN
(E10P PATTERN FOR BACK AND FLAP)



SIZE 2 MINI PUNCH



SIZE 2 MINI PUNCH



SIZE 2 MINI PUNCH

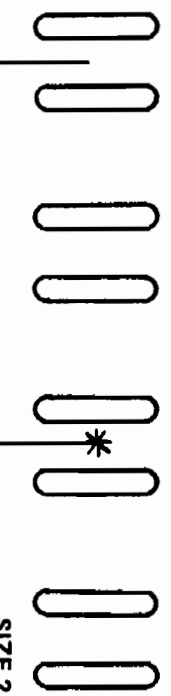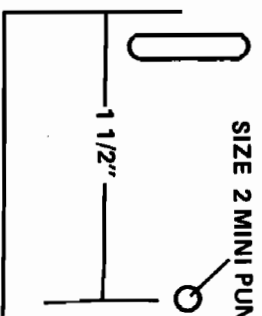

MEASURE TO THIS MARK FOR CORRECT WAIST SIZE


STITCH LINE

POUCH BACK AND FLAP PATTERN (FLOP PATTERN FOR BACK AND FLAP)

PUNCH THESE HOLES IN POUCH BACK ONLY

CUT THIS LINE FOR POUCH BACK ONLY

STITCH LINE

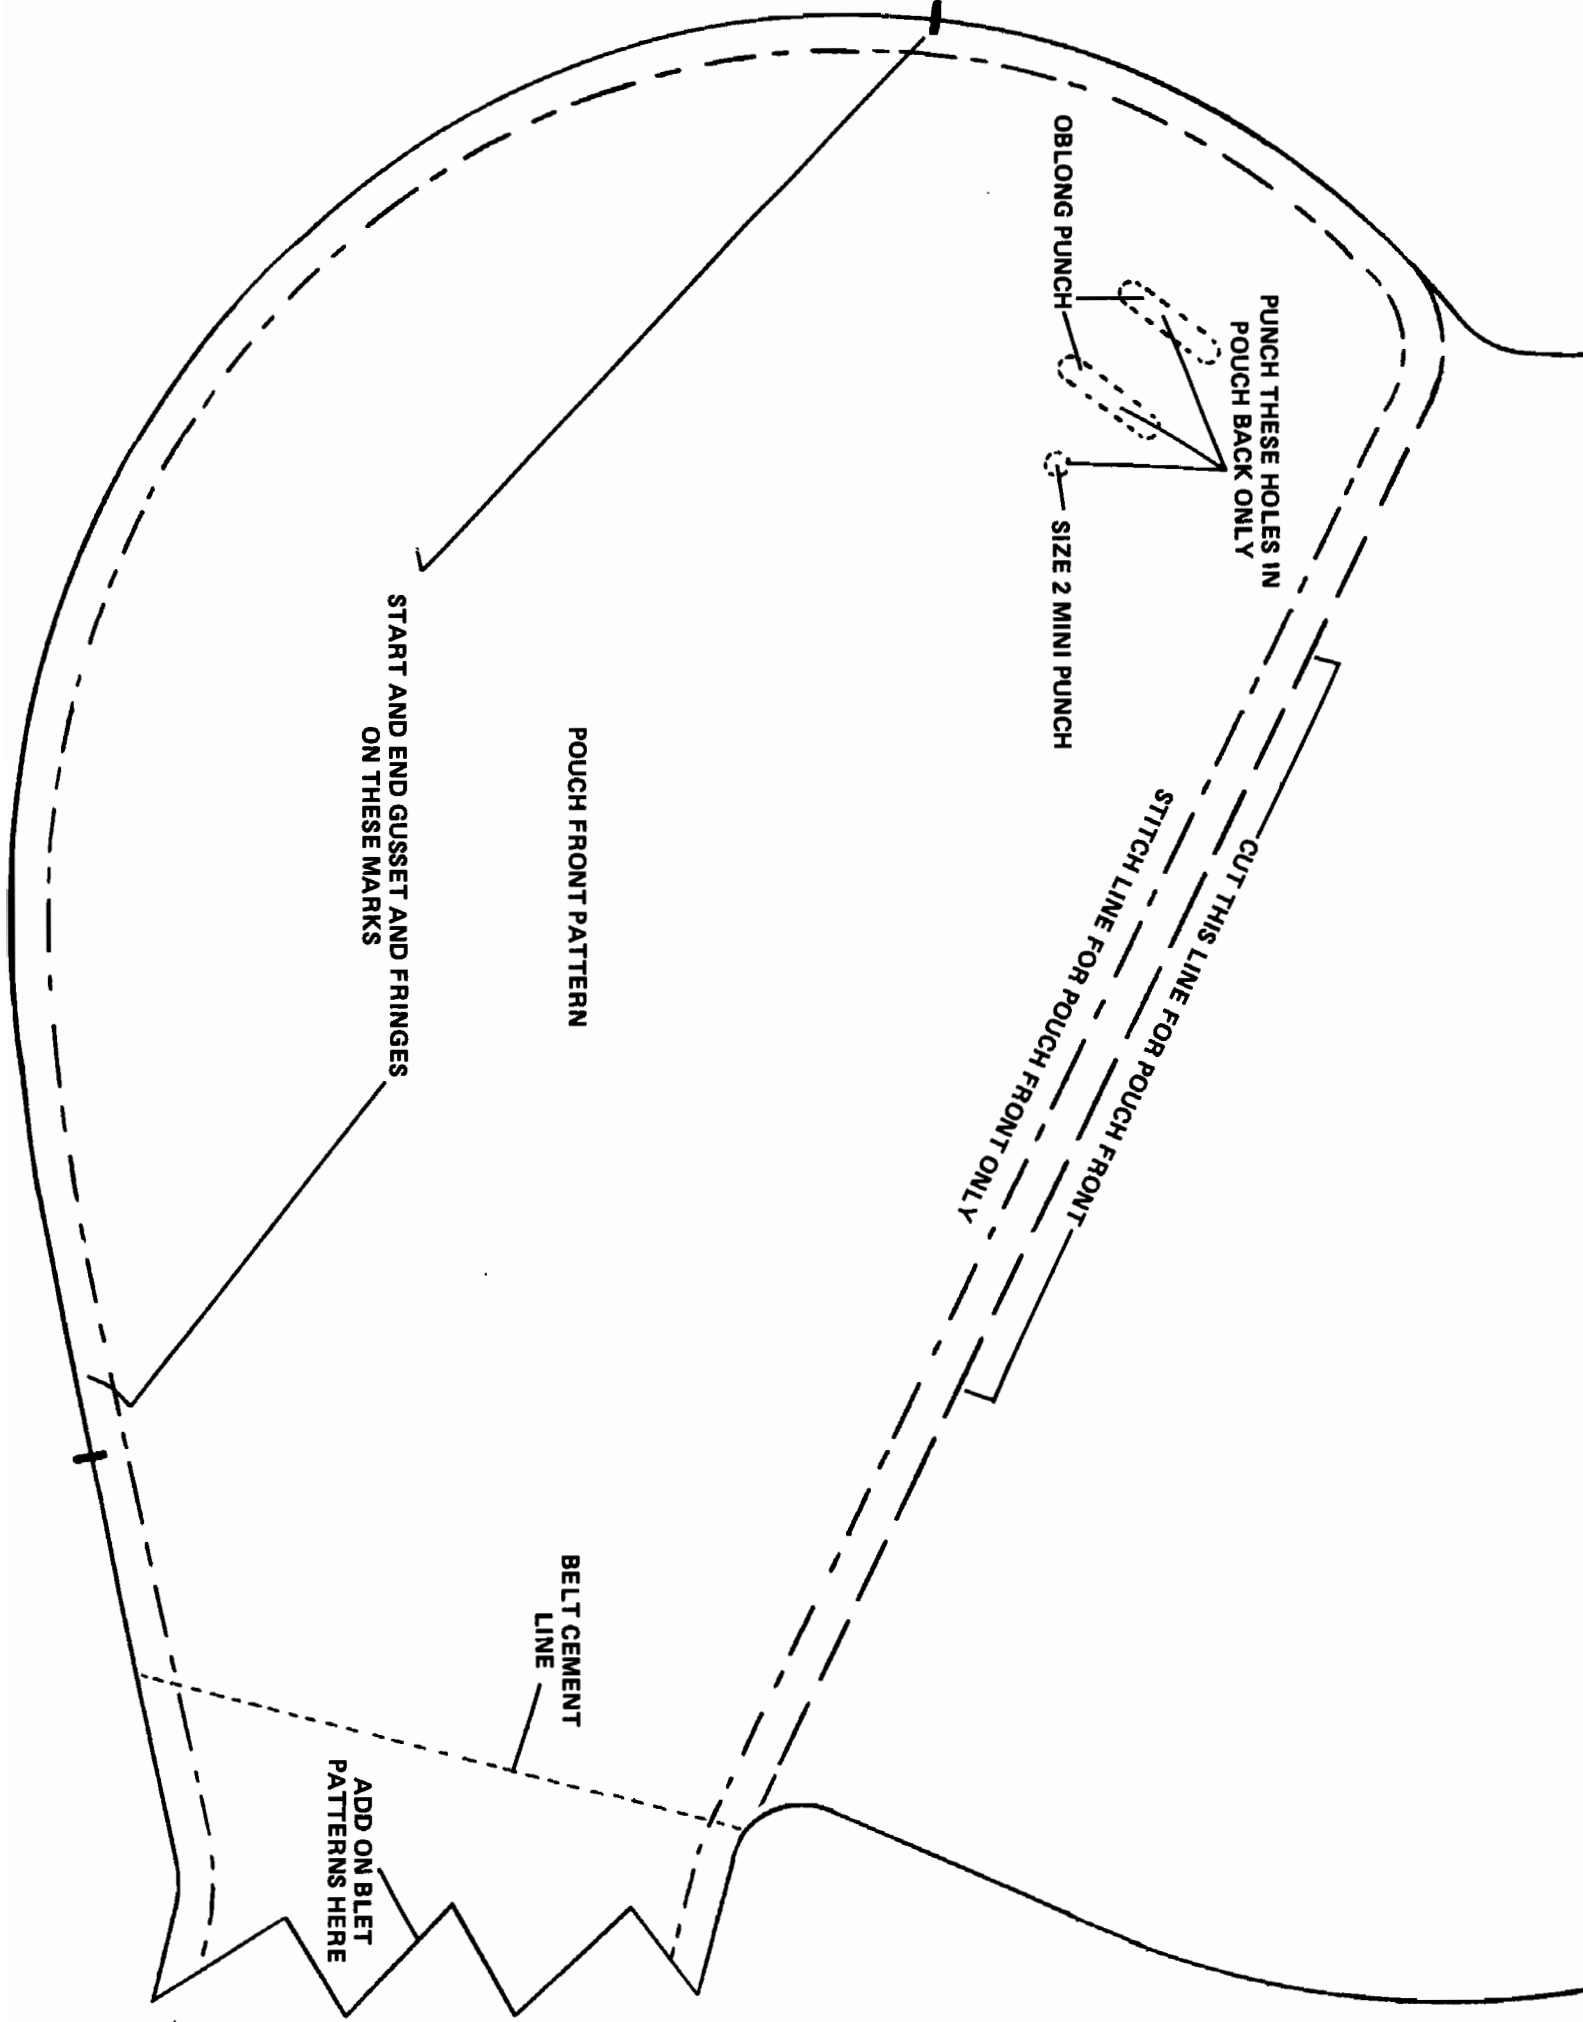

PUNCH THESE HOLES IN POUCH BACK ONLY

OBLONG PUNCH

SIZE 2 MINI PUNCH


POUCH FRONT PATTERN

START AND END GUSSET AND FRINGES ON THESE MARKS

CUT THIS LINE FOR POUCH FRONT
STITCH LINE FOR POUCH FRONT ONLY

BELT CEMENT LINE

ADD ON BLET PATTERNS HERE

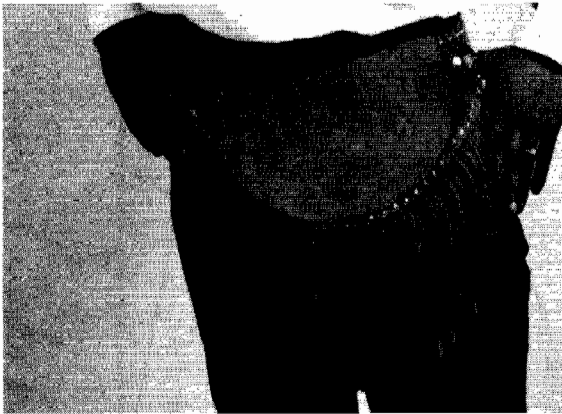

How To

MAKE A FRINGED BELT POUCH

BY JEAN LEWIS


STOCK No. 0915-69

CHAP MOC SPLIT, No. 9072
 (APPROX 8.5 ft.)
 7 YDS 5/32" LACE (FOR BUCK-STITCHING)
 LACING NEEDLE
 5/32" THONGING CHISELS, No. 8060 AND No. 8050
 5/8" OBLONG PUNCH, No. 1565
 SIZE 2 MINI PUNCH

6 MEDIUM SIZED SLOTTED CONCHOS
 1 HEAVY-DUTY DOG LEASH SNAP, No. 1155
 SHORT RIVETS, No. 1271
 RIVET SETTER, No. 8100 or No. 8099
 SHEARS OR ROTARY CUTTER

STEP 1. Transfer then cut patterns out of brown paper. Cut belt ends long and dont round off, as shown on cutting pattern. Try paper pattern around waist and mark proper size (illus. A).
STEP 2. Tape paper patterns to backside of suede then cut out all pouch parts. Cut belt ends to correct length by lining up mark made in step 1 over waist size mark shown on cutting pattern. Punch 2 oblong holes and rivet hole in pouch back where shown on cutting pattern. Do not punch oblong holes or rivet holes in belt area at this time.
STEP 3. Punch lacing slits around pouch front and blet part only!
STEP 4. Cement belt of pouch front to belt of pouch bibetillus. B).
STEP 5. Punch lacing slits around pouch and belt assembly using slits punched in step 3 as a guide. Do not re-punch slits across top of pouch front. Line up top edges of back and front fringe parts. Punch lacing slits across top edge of both parts. Fold gusset in half along fold line then punch lacing slits along edge (illus. C).

STEP 6. Buckstitch around belt end of pouch assembly to point where fringe and gusset area begins, as shown on cutting pattern. Sandwich front fringe between pouch front and one end of gusset. Stitch in place (illus. D). Continue stitching pouch front to back after front fringe and one side of gusset are attached. Sandwich back fringe between other side of gusset and pouch back. Stitch together with a separate piece of lace. (illus. D).
STEP 7. Punch four sets of oblong holes in tip area of belt where shown on cutting pattern. Punch sets of oblong holes down center of belt, approximately 3 inches apart (illus. E).
STEP 8. Weave 1/2" wide strip of suede through first four sets of holes in tip area of belt. Weave strip through remaining set of oblong holes adding a concho at each set of hōles (illus. F). Punch rivet holes through belt and strip where shown on cutting pattern. Set all rivets (illus. F).
STEP 9. Punch rivet holes in ends of 3 inch long suede strip. Attach swivel snap to pouch back with 3 inch strip and rivet (illus. G).
STEP 10. Place belt pouch around waist and hook swivel snap to one of four loops (illus. H).

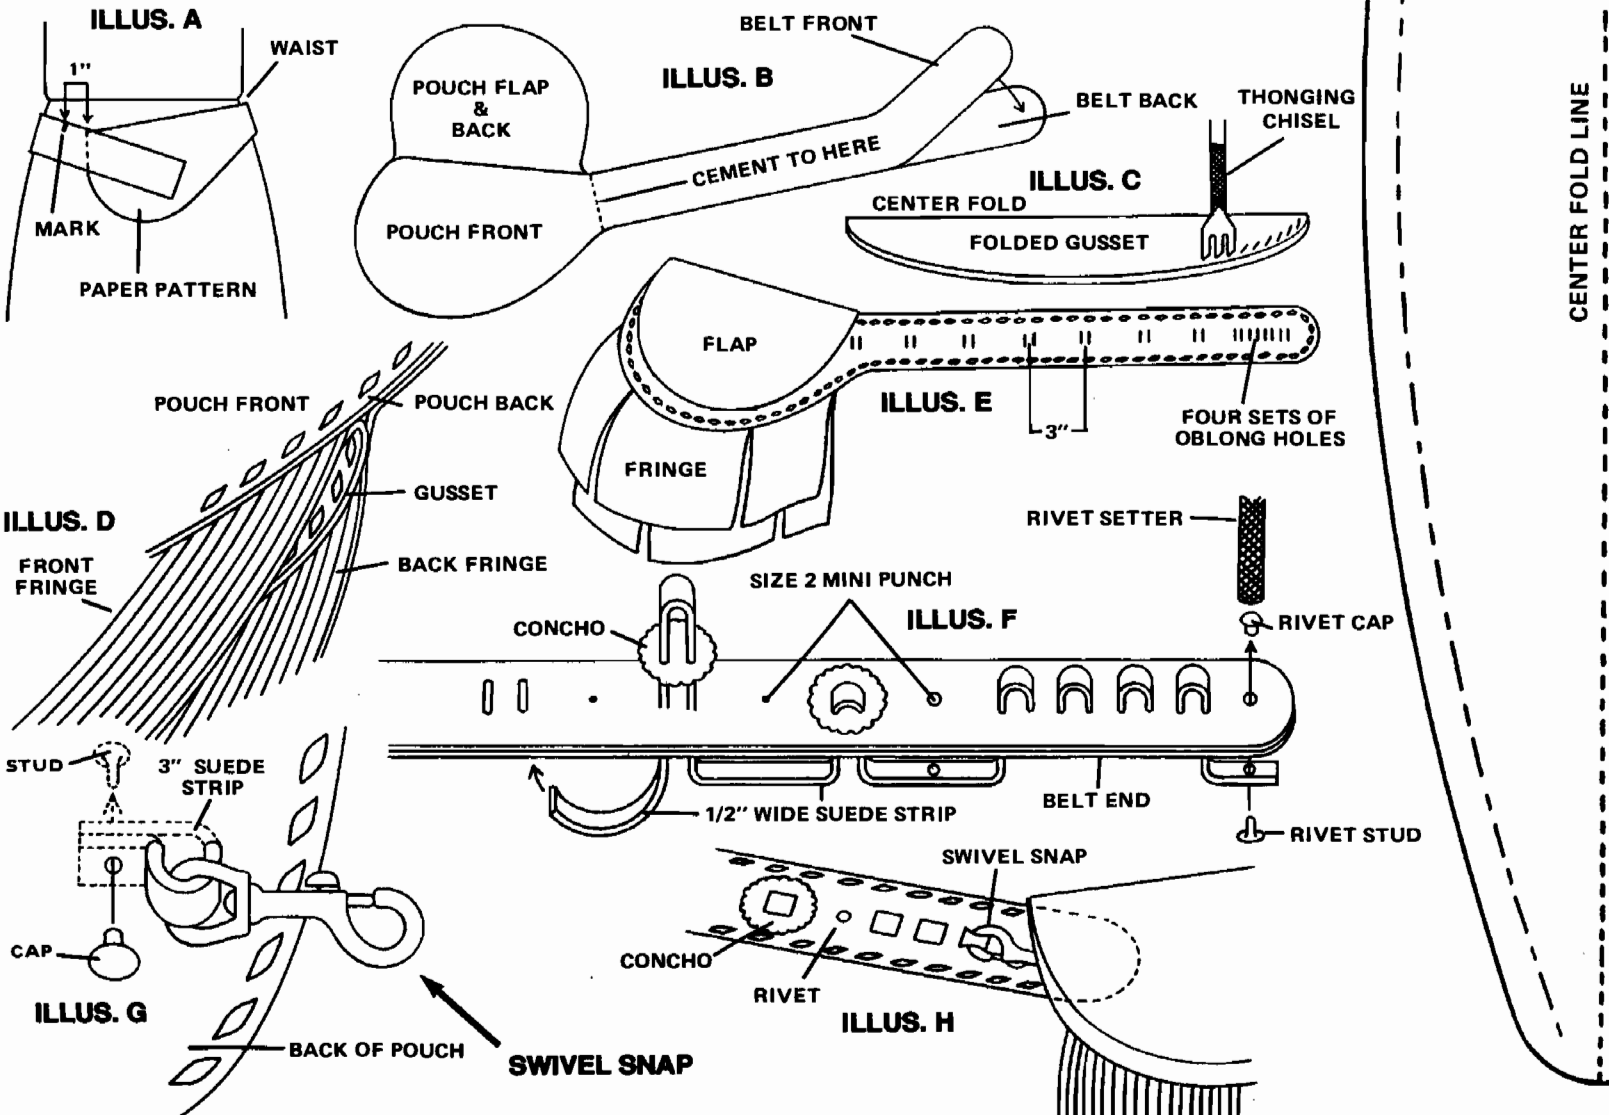

CENTER FOLD LINE

H
CK No. 0915-69

LOTTED

OG LEASH

No. 1271
No. 8100 or No.

ARY CUTTER

to point
pattern.
of gusset.
t to back
sandwich
k. Stitch

alt where
n center

ur sets of
ng set of
(). Punch
g pattern.

p. Attach
(s. G).
l snap to

ONGING
CHISEL




SETS OF
HOLES

RIVET CAP




RIVET STUD

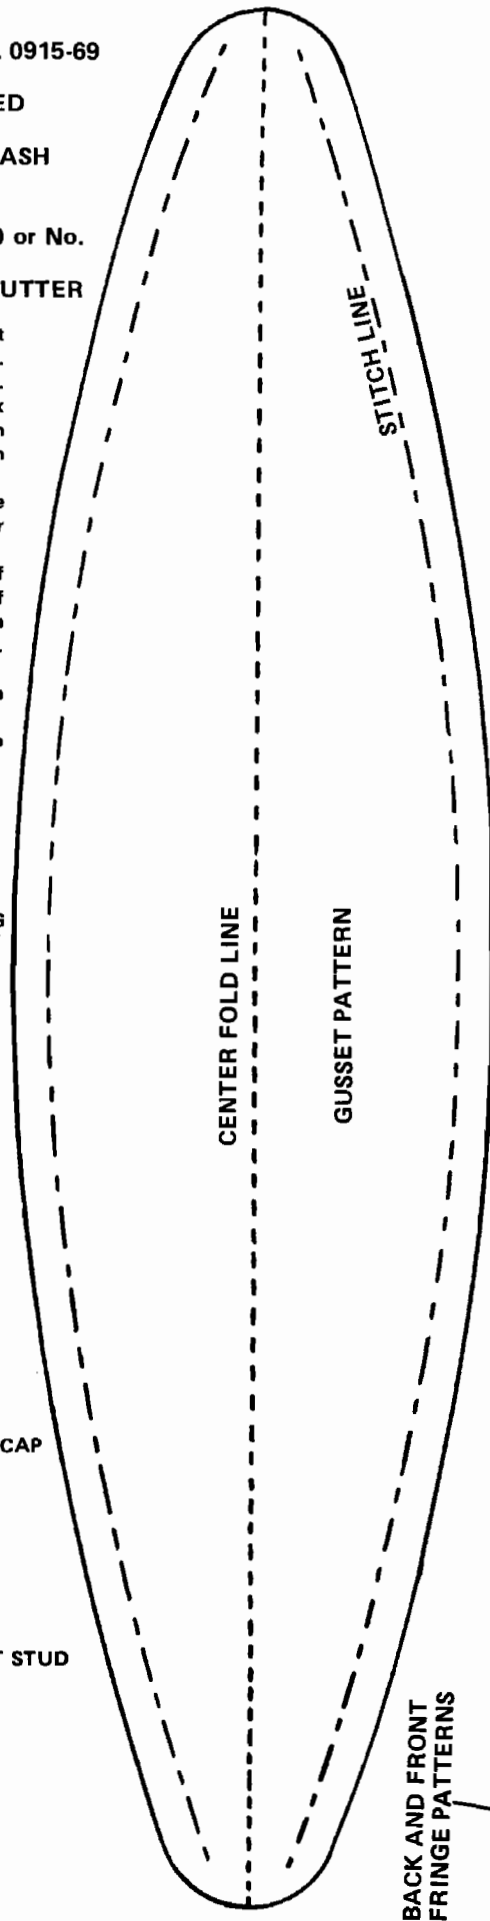


CENTER FOLD LINE

GUSSET PATTERN

BACK AND FRONT
FRINGE PATTERNS

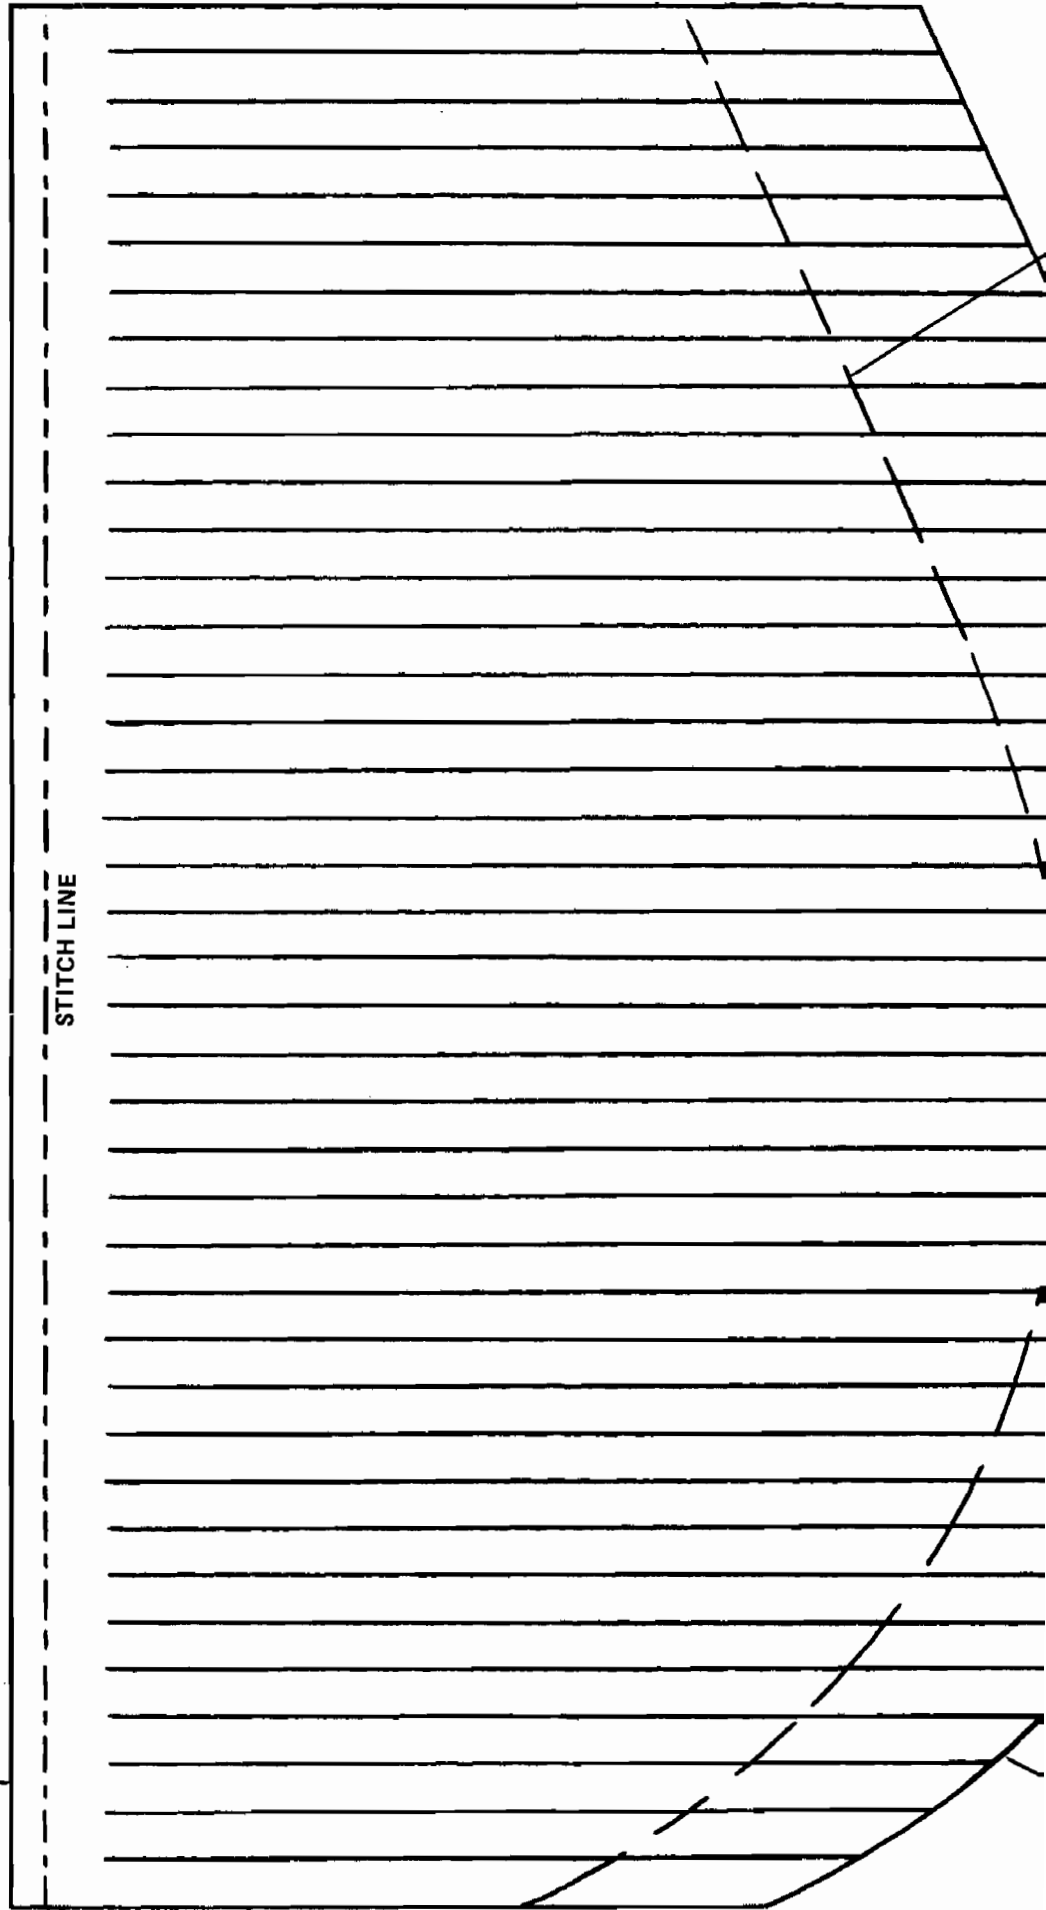

STITCH LINE

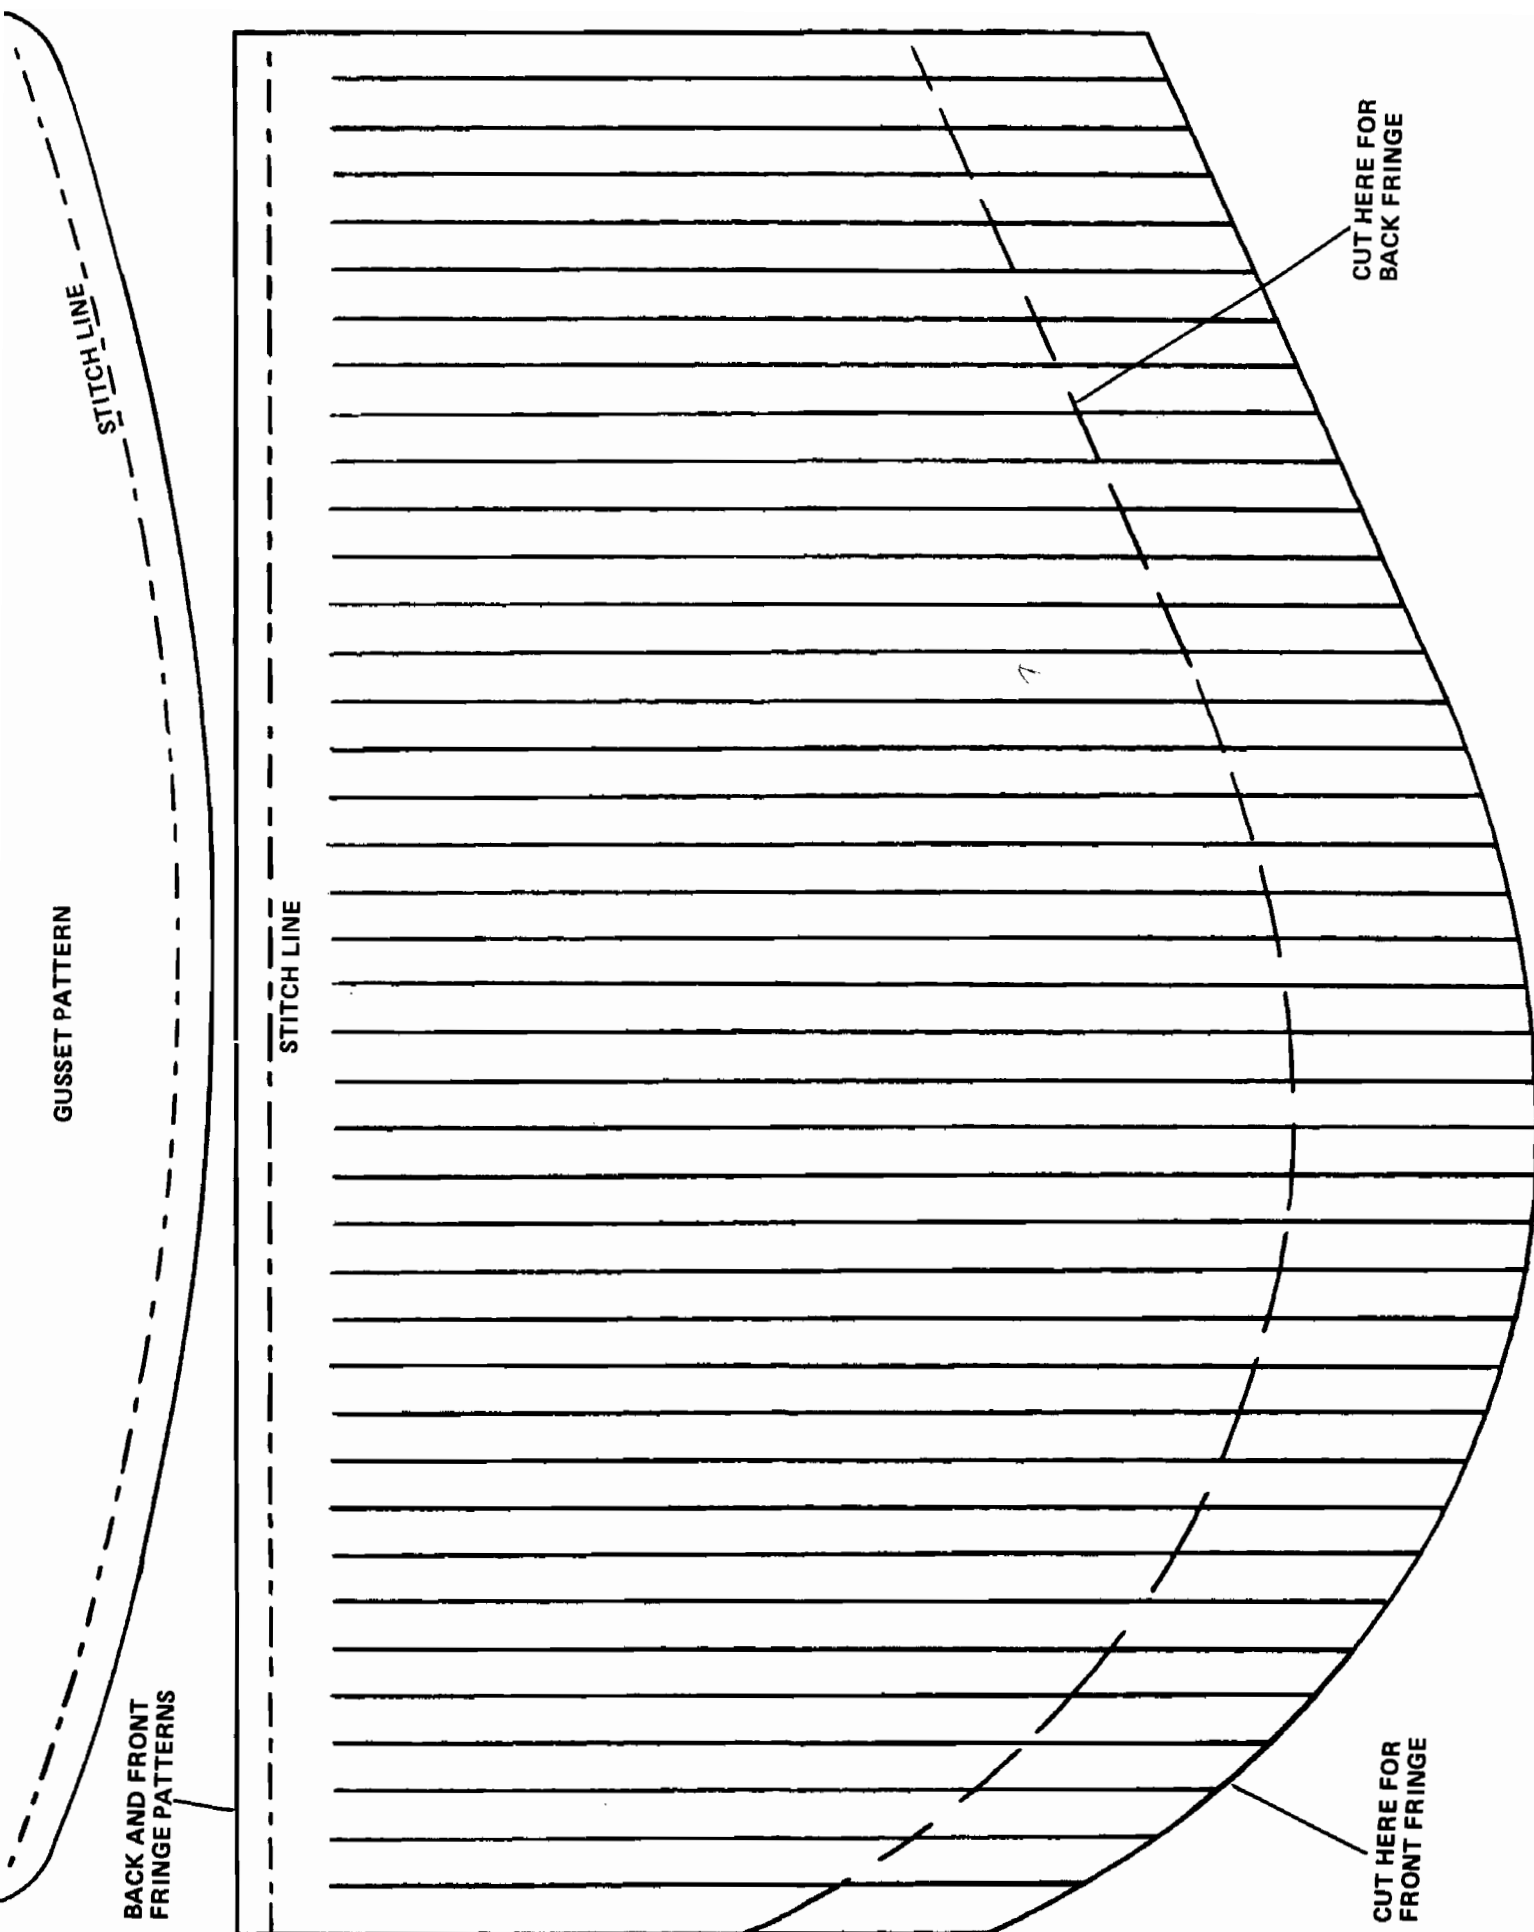

GUSSET PATTERN

STITCH LINE

BACK AND FRONT
FRINGE PATTERNS

STITCH LINE

CUT HERE FOR
BACK FRINGE

CUT HERE FOR
FRONT FRINGE

